

## To Set the Thermostat

Press the **SET TEMP. button** (Fig. 6 ②④).

- ▲ **button**: Press to raise the thermostat setting.
- ▼ **button**: Press to lower the thermostat setting.

### ● Thermostat setting range:

AUTO .....	18-30 °C
Heating .....	16-30 °C
Cooling/Dry .....	18-30 °C

The thermostat cannot be used to set room temperature during the FAN mode (the temperature will not appear on the Remote Controller's Display).

About three seconds later, the entire display will reappear.

The thermostat setting should be considered a standard value, and may differ somewhat from the actual room temperature.

## To Set the Fan Speed