

F/W upgrading

- 1 Unzip the F/W upgrade Zip file.
- 2 Copy the F/W upgrade file into USB Memory.
- 3 Connect USB Memory into an USB input of This Unit after turning the Power Off of This Unit.
- 4 While pressing F/W hole button with a sharp tool, connect power adapter into DC In.
- 5 This Unit will be automatically updated while showing Pop up windows during upgrading.
- 6 This Unit will be reset automatically after upgrading F/W.

How to find F/W version

Press Stop and Pause button consecutively on remote control in **SET UP** mode.